



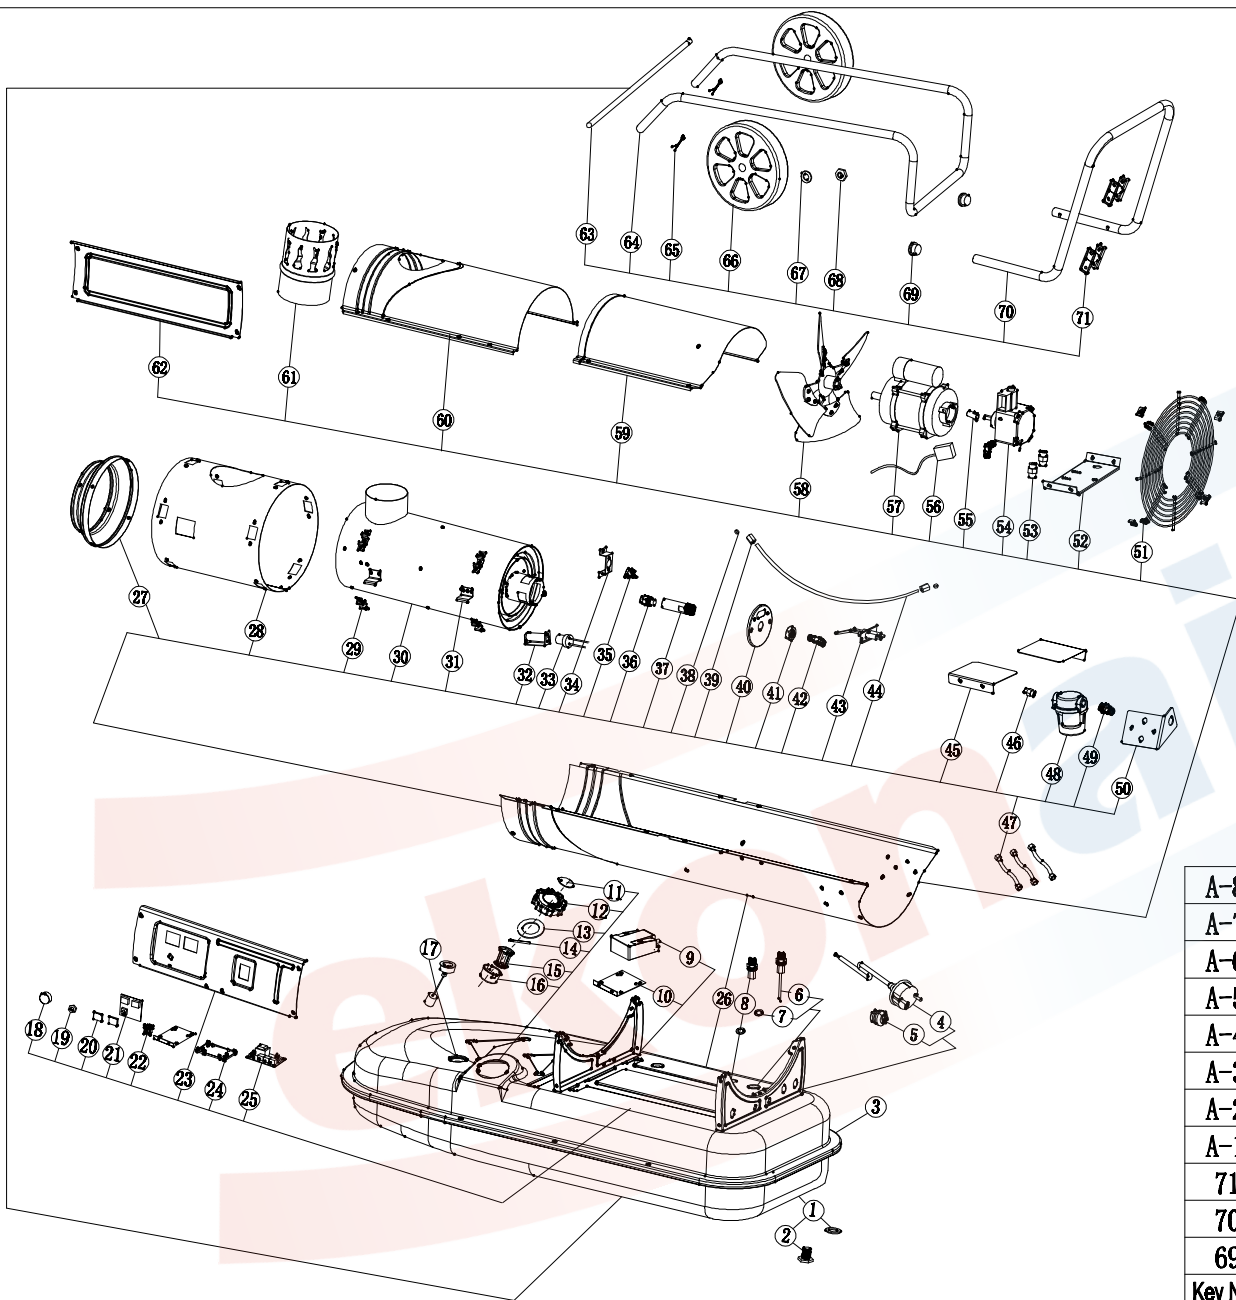

A-8	Probe protection top cover	1	45	Air balance plate	2	11	Breath cover	1
A-7	Wire fixing plate	1	44	Copper tube	1	10	Bracket of Ignition transformer	2
A-6	Probe protection bottom cover	1	43	Ignition needle	1	9	Ignition transformer	1
A-5	Thermostat probe	1	42	Elbow connection	2	8	Oil pipe union	1
A-4	Remote control connector male shell	1	41	Screw nut	1	7	Oil drain seal ring	2
A-3	Remote control connector male cover	1	40	Nozzle base plate	1	6	Oil suction pipe	1
A-2	Buckle	1	39	Copper pipe fixing nut	1	5	Cable fastener	1
A-1	Remote control connector female shell	1	38	Copper pipe inner sleeve	1	4	Power cord	1
71	Cable holder	2	37	Nozzle Adapter	1	3	Fuel tank	1
70	Handle	1	36	Nozzle	1	2	Oil drain screw	1
69	Steel pipe plug	2	35	Re-set thermostat	1	1	Oil drain seal ring	1
Key No.	Description	QTY	Key No.	Description	QTY	Key No.	Description	QTY

68	Screw nut	2	34	Re-set thermostat bracket	1
67	Flat gasket	2	33	Photocell ass'y	1
66	Wheel	2	32	Photocell ass'y bracket	1
65	Cotter pin	2	31	Chamber shield bracket	4
64	Feet pipe	1	30	Combustion chamber ass'y	1
63	wheel axle	1	29	Chamber bracket	8
62	Side plate	1	28	Combustion chamber shield	1
61	Chimney connector	1	27	Air outlet	1
60	Top front cover	1	26	Bottom cover	1
59	Top rear cover	1	25	Power PCB1	1
58	Fan	1	24	PCB support	1
57	Motor	1	23	Control panel	1
56	Solenoid valve cord	1	22	On/off switch	1
55	Gear pump axle sleeve	1	21	Display PCB2	1
54	Gear pump	1	20	Display window	1
53	Oil pipe connector	1	19	Thermostat adjustment knob nut	1
52	Motor support	1	18	Thermostat knob	1
51	Air inlet grill	1	17	Oil leveler	1
50	Filter support	1	16	Oil inlet filter	1
49	Intake fuel connector	1	15	Oil inlet filter holder	1
48	Oil filter	1	14	Tank cap shaft	1
47	Oil pipe	3	13	Sealing ring	1
46	Burner head connector	1	12	Fuel tank cap	1
45	Air balance plate	2	11	Breath cover	1
44	Copper tube	1	10	Bracket of Ignition transformer	2
43	Ignition needle	1	9	Ignition transformer	1
42	Elbow connection	2	8	Oil pipe union	1
41	Screw nut	1	7	Oil drain seal ring	2
40	Nozzle base plate	1	6	Oil suction pipe	1
39	Copper pipe fixing nut	1	5	Cable fastener	1
38	Copper pipe inner sleeve	1	4	Power cord	1
37	Nozzle Adapter	1	3	Fuel tank	1
36	Nozzle	1	2	Oil drain screw	1
35	Re-set thermostat	1	1	Oil drain seal ring	1

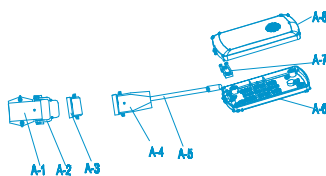

BHC 30